

Buckle Stop Instructions

ph: 866.55THINK (558.4465) fax: 707.527.0808

3636 North Laughlin Road, Suite 170, Santa Rosa, CA 95403

thinkTANK photo

Be Ready "Before The Moment"



The "Buckle Stops" are the metal secondary buckles connected to the loose webbing straps on either side of the main belt buckle.



To adjust a Buckle Stop, first, loosen the webbing threaded through it. Then, move the Buckle Stop closer or farther from the main buckle.



Positioning the Buckle Stops one to two inches away from the main buckle allows a photographer to loosen or tighten the belt as needed. Keeping the Buckle Stops directly against both sides of the main buckle does not allow the belt to be resized without loosening the Buckle Stops first.